

Installation Manual

For your safety and comfort, read this manual carefully.

FT-FM-AUX

FAAFTECH
LIMITLESS TECHNOLOGY

Scan this QR code to see which vehicles are compatible.



TECHNICAL SUPPORT

+55 0800 603 2330 or +55 62 3241 4600

suporte@faaftech.com.br

www.faaftech.com.br

Available from Monday to Friday, from 8 a.m. to 6 p.m. Brasília time

Follow us on social media



Installation


The car ignition must be off during the installation process.

1st Connect the red (ACC) and the black (GND) cables.

2nd Connect the audio input RCAs on a video interface or on an external accessory, such as a DVD, a TV or a mirroring module.

3rd Setup the “FM Selector” switches according to the “FM Bandwidth Selection” chart.

Important Notice: The chart shows 50 different bandwidths you can use. Choose the best option before finalizing the installation process. Try to choose a bandwidth that is not being used by any nearby radio stations, to avoid interference. If you choose a bandwidth that is already being used by a radio, you will suffer interference on your vehicle.

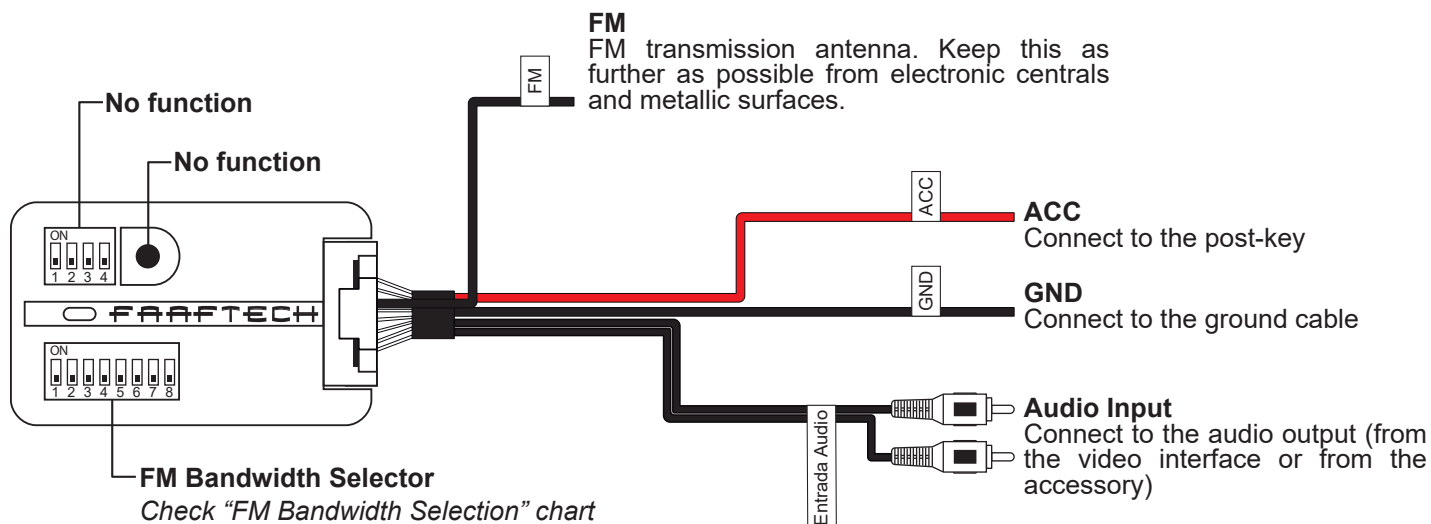

FM BANDWIDTH SELECTION

BANDWIDTH SELECTION CHART

87,9 MHz	89,9 MHz	92,9 MHz	103,9 MHz	105,9 MHz
88,1 MHz	90,1 MHz	93,1 MHz	104,1 MHz	106,1 MHz
88,3 MHz	90,3 MHz	94,3 MHz	104,3 MHz	106,3 MHz
88,5 MHz	90,5 MHz	95,5 MHz	104,5 MHz	106,5 MHz
88,7 MHz	90,7 MHz	96,7 MHz	104,7 MHz	106,7 MHz
88,9 MHz	90,9 MHz	98,9 MHz	104,9 MHz	106,9 MHz
89,1 MHz	91,1 MHz	99,1 MHz	105,1 MHz	107,1 MHz
89,3 MHz	91,3 MHz	100,3 MHz	105,3 MHz	107,3 MHz
89,5 MHz	91,5 MHz	101,5 MHz	105,5 MHz	107,5 MHz
89,7 MHz	91,7 MHz	102,7 MHz	105,7 MHz	107,7 MHz

FUNCTIONING

Once the installation is finalized, the device will transmit the audio via FM on the selected bandwidth.

To use it, just turn on the multimedia and tune in the bandwidth you selected during the installation process.

If the multimedia has an RDS function, “FAAFTECH” will be shown as the radio station’s name, as pictured below:

